

Update inverter software for AutoUpdate


Update to the latest version

The automatic update is supported from software UI 01.18.5255. This must first be installed manually via the web server in the **Update** area.

Select the *.swu and start the update process. If the latest version is already installed, skip to point 5.


Step 1

Read the inverter IP address from the display (e.g. 192.168.172.20). Open a browser on a PC, smartphone or tablet and enter the inverter IP address in the address line.

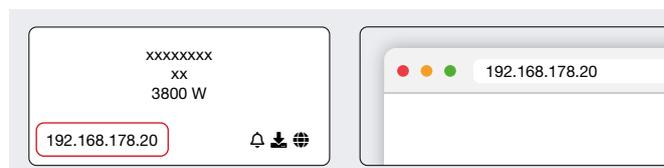


Step 2

Log into the webserver as **Plant owner** with your password. Then select the item **Update** and download the current update via the item „here“. If this is not possible, the update can be downloaded via the following link <https://www.kostal-solar-electric.com/software-update-hybrid>.

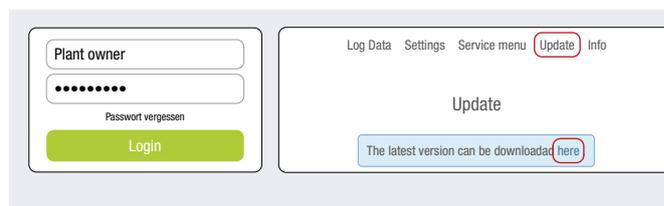

Step 3

Select the **update file (*.swu)** on your device and then click the **Run** button.

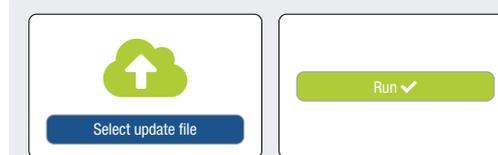


Step 4

The update will be installed on the inverter. After the installation, the **inverter is restarted** or must be restarted when requested. After restarting of the inverter, which can take approx. 10 minutes, please log in to the webserver again.

Step 5

Now set up the AutoUpdate (system update) in your inverter using the changed menu item **Update**. Under the menu you find now 3 update variants for the **System update**. We recommend that you select the **Automatic updates**. Confirm your selection with **Save**.

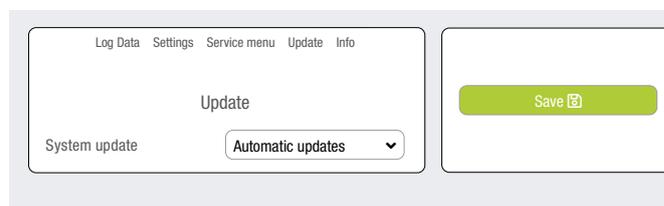

Contact

KOSTAL Solar Electric GmbH
Hanferstr. 6
79108 Freiburg i. Br.
Germany
Phone: +49 761 47744-100
Fax: +49 761 47744-111
www.kostal-solar-electric.com